




Swipe upward on the screen to display the button banner.

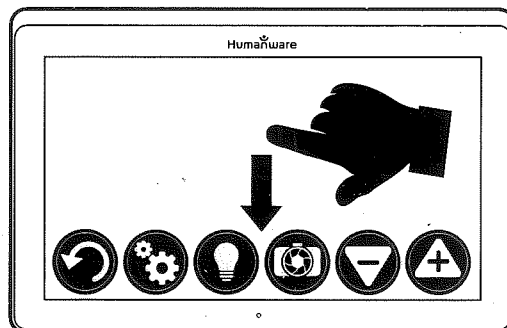


To hide the button banner, do a **downward swipe** on the screen.

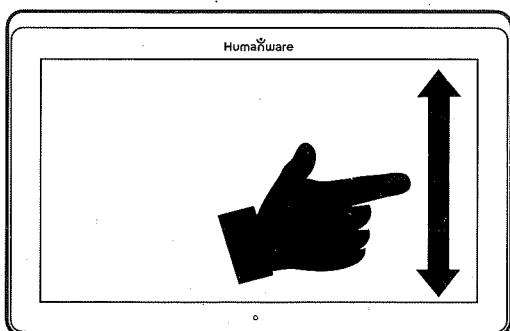


To toggle between colour; positive and negative contrasts, **swipe vertically** on the right side of the screen.

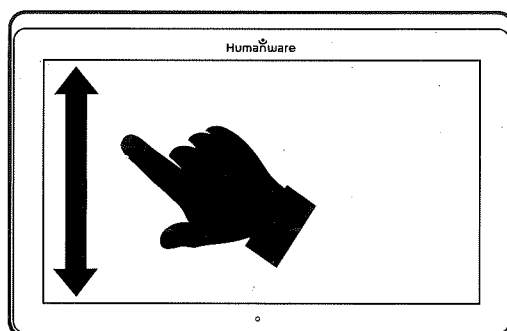


To capture a multipage document, toggle by **swiping vertically** on the left side of the screen.

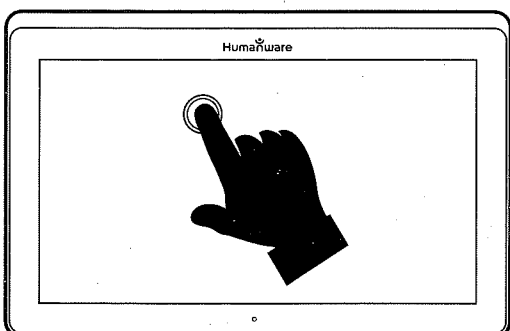


Double Tap to lock autofocus when in live mode (writing)

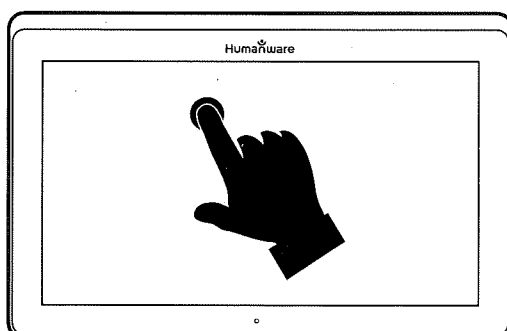


Hold your finger on the screen to capture your document

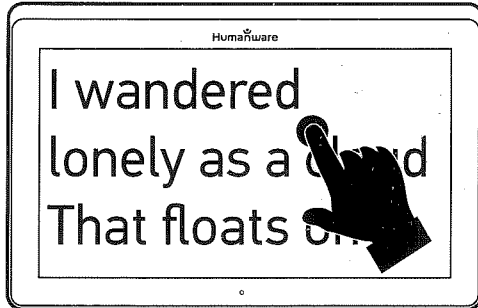


Hold your finger on the screen to start reading a captured document (formatted mode)

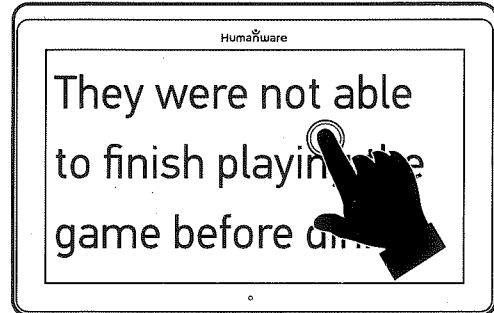


Double Tap to turn speech on and off when reading

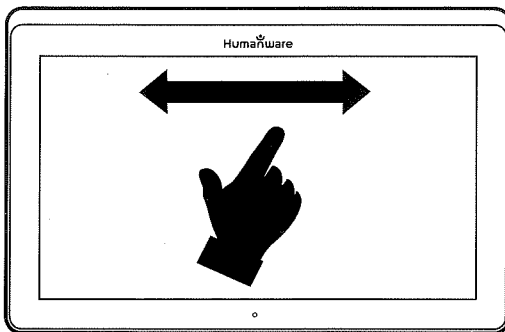


Swipe horizontally to change the speed

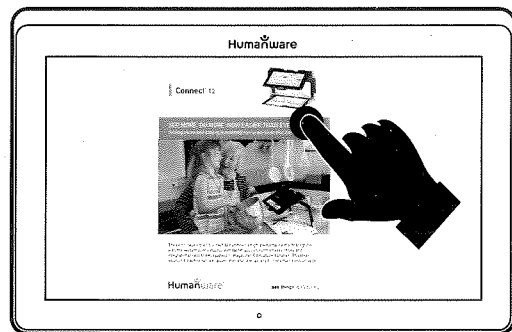

Hold your finger on a document in the gallery to rename, delete or move

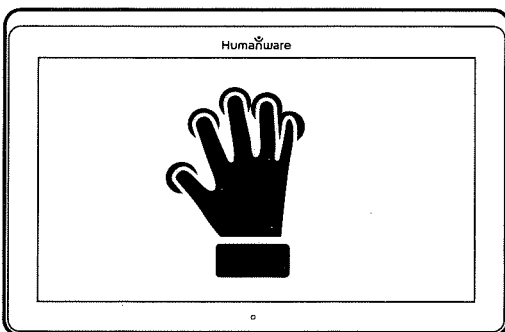

Hold four or five fingers anywhere on the screen for 2 seconds to exit to Android

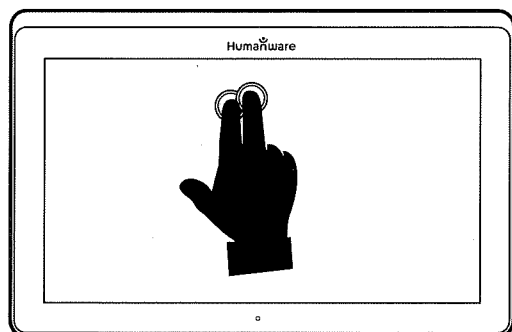

Double tap with two fingers anywhere on the screen to access the carousel menu.